**SINGER® PROJECTS**

# Quilted Double Oven Mitt

Create this fun and easy project for yourself or as a gift, and it is so quick to make. You can match your kitchen decor with your fabric choice.

**PROJECT SKILL LEVEL:** ■■□□

## Shopping List

Everything you need to complete this project in one place. Use this convenient checklist to ensure you have all required materials in your sewing room, or take it with you while you shop for supplies.

- o ½ yard Cotton Print Fabric for Outside and Pockets
- o ¼ yard Cotton Batting
- o ½ yard Needle Punched Insulated Fleece
- o ¾ yard Cotton Tone-on-Tone Fabric for Lining and Binding
- o SINGER® Quilting Sewing Machine Needle, Size 90/14
- o SINGER® Patchwork™ 7285Q Sewing and Quilting Machine
- o Extension Table

Singer, the Cameo "S" Design and Design, PATCHWORK and INSPIRA are trademarks of The Singer Company Limited S.a.r.l. or its Affiliates. © 2021 The Singer Company Limited S.a.r.l. or its Affiliates. All rights reserved.

- ¼” Foot
- Satin Stitch Foot
- Even Feed / Walking Foot
- Sulky 30wt Cotton Thread
- 50wt Cotton Sewing Thread
- Rotary Cutter and Mat
- 6” x 24” Ruler
- SINGER® SteamCraft Iron
- INSPIRA™ ¼” Stick N’ Fuse II Tape
- Chalk Marker
- Screwdriver
- Pins
- Safety Pins
- Scissors

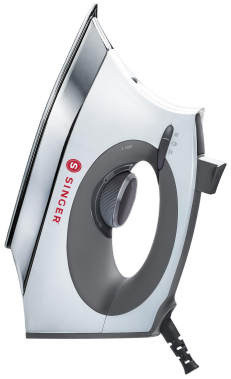

# Cutting Instructions

Cotton Print for Outside and Pockets

- 1(7” x 34”) Outside
- 4(7” x 9½”) Pockets

Cotton Print Tone-on-Tone for Lining and Binding

- 1(7” x 34”) Lining
- 1(18” x 45”) Binding (subcut into 2½” strips on the bias, cut enough that when pieced together it will equal 110”)

Cotton Batting

- 1(7” x 34”)

Needle Punched Insulated Fleece

- 1(7” x 34”)
- 2(7” x 9½”)

Singer, the Cameo “S” Design and Design, PATCHWORK and INSPIRA are trademarks of The Singer Company Limited S.a.r.l. or its Affiliates. © 2021 The Singer Company Limited S.a.r.l. or its Affiliates. All rights reserved.

# Sewing Machine Set Up

- Insert a Quilting sewing machine needle, Size 90/14 in your machine.
- Thread with Sulky 30wt Cotton thread on top to match the lining and Sulky 30wt Cotton thread in the bobbin to match the outside fabric.
- Attach the extension table by removing the accessory box. Lift the supporting leg of the extension table, and slide into place while fitting the guide pins into the machine.

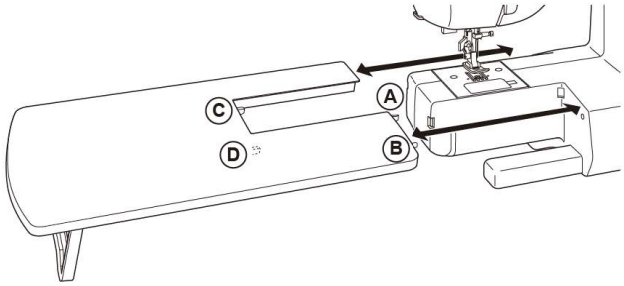


- Attach the Even Feed / Walking Foot by raising the needle, loosen the presser foot holder screw and remove the presser foot holder. Place the lever of the Walking Foot onto the needle screw and attach the Walking Foot onto the presser foot holder. Lower the foot and tighten the presser foot holder screw. Note: When sewing with the walking foot sew in slow to medium speed.

- Select a Straight Stitch with a stitch length of 3.5mm.
- Activate Needle Up/Down button.

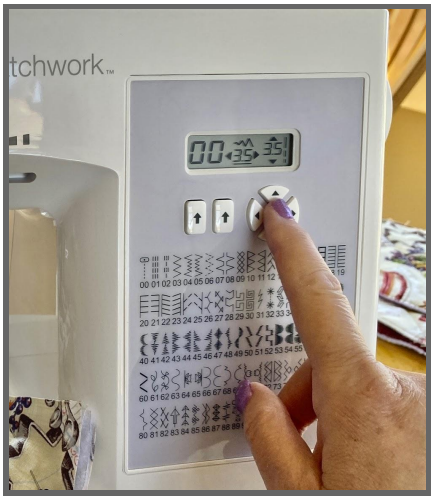

Singer, the Cameo “S” Design and Design, PATCHWORK and INSPIRA are trademarks of The Singer Company Limited S.a.r.l. or its Affiliates. © 2021 The Singer Company Limited S.a.r.l. or its Affiliates. All rights reserved.

# Project Steps

1. With a chalk marker draw diagonal lines 3” apart on the right side of the 7” x 34” lining.

2. Layer the fabric and batting pieces as follows:
    - 7” x 34” Outside Print Fabric right side down on a flat surface
    - 7” x 34” Needle Punched Insulated Fleece
    - 7” x 34” Cotton Batting
    - 7” x 34” marked Tone-on-Tone Fabric for Lining right side up

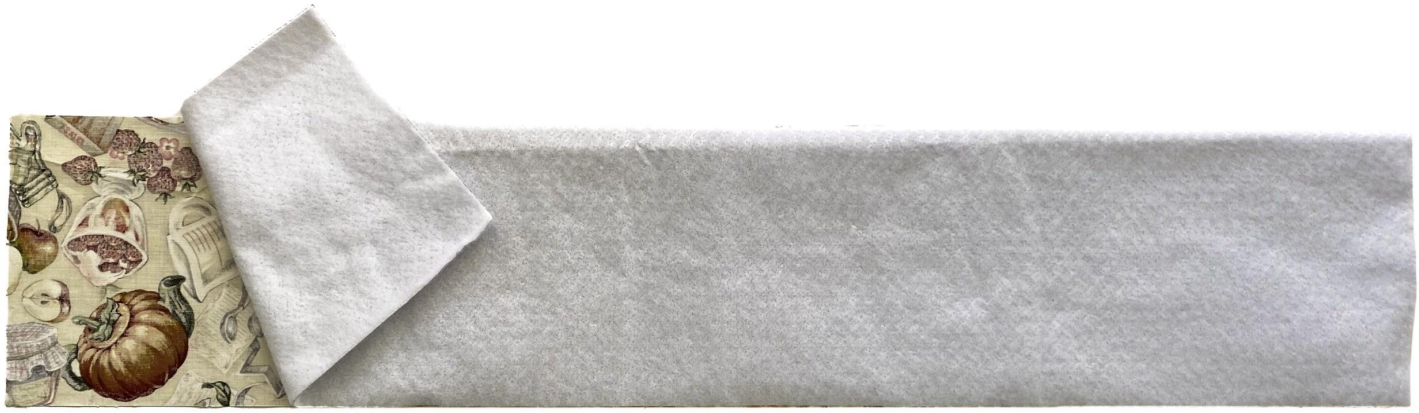

3. Pin the layers together using safety pins.

Singer, the Cameo “S” Design and Design, PATCHWORK and INSPIRA are trademarks of The Singer Company Limited S.a.r.l. or its Affiliates. © 2021 The Singer Company Limited S.a.r.l. or its Affiliates. All rights reserved.

4. Machine quilt along the marked diagonal lines.

5. Select a 3-Step Zigzag stitch and stitch around the perimeter of the quilted piece.

   Note: this helps to compress the fabric and hold the layers together.

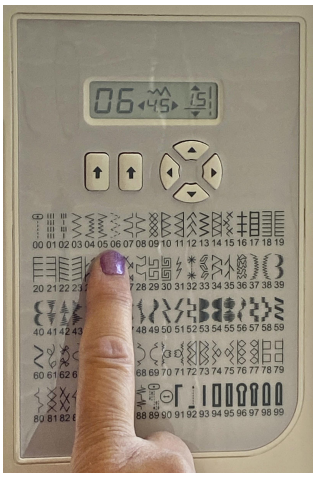

## Project Steps - Pockets (Make 2)

1. With a chalk marker draw crosshatch lines 2” apart on the right side of 2 of the 7” x 9½” pocket pieces.

2. Layer the 2 pockets as follows:
   - 7” x 9½” Pocket Fabric right side down
   - 7” x 9½” Needle Punched Insulated Fleece
   - 7” x 9½” Pocket Fabric right side up
3. Pin the layers together using safety pins.

Singer, the Cameo “S” Design and Design, PATCHWORK and INSPIRA are trademarks of The Singer Company Limited S.a.r.l. or its Affiliates. © 2021 The Singer Company Limited S.a.r.l. or its Affiliates. All rights reserved.

# Sewing Machine Set Up

- Thread with Sulky 30wt Cotton thread on the top and bobbin to match the pocket fabric.
- Select a Straight Stitch with a stitch length of 3.5mm.
- Activate Needle Up/Down button.

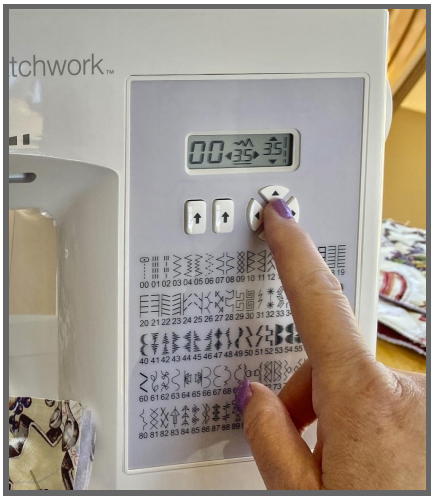

4. Machine quilt along the marked lines.

Singer, the Cameo “S” Design and Design, PATCHWORK and INSPIRA are trademarks of The Singer Company Limited S.a.r.l. or its Affiliates. © 2021 The Singer Company Limited S.a.r.l. or its Affiliates. All rights reserved.

5. Select a 3-Step Zigzag stitch and stitch around the perimeter of the 2 pocket pieces.

## Sewing Machine Set Up

- Thread with 50wt Cotton Sewing thread on the top and bobbin to match the binding.
- Remove the Walking Foot.  Attach the presser foot holder. Attach the ¼” Foot.
- Select a Straight Stitch with a stitch length of 2.5mm.

Singer, the Cameo “S” Design and Design, PATCHWORK and INSPIRA are trademarks of The Singer Company Limited S.a.r.l. or its Affiliates. © 2021 The Singer Company Limited S.a.r.l. or its Affiliates. All rights reserved.

# Project Steps - Binding

1. Sew all the 2½” binding strips together using a ¼” seam allowance.
2. Press the seams open with the SINGER® SteamCraft Iron.
3. Press the strip in half lengthwise with the wrong sides together.

Tip: Fuse INSPIRA™ ¼” Stick N’ Fuse II Tape on the binding. Line up one edge of the tape along the fold on the binding strip, this will eliminate the need for pinning the binding down when you stitch it in place for the final assembly.

# Project Steps - Binding the Pockets

1. Sew the binding to the top of both pockets using a ¼” seam allowance. Note: Make sure the side of the binding with the INSPIRA™ ¼” Stick N’ Fuse II Tape is facing up.
2. Fold the binding to the back of the pocket and fuse in place.
3. Topstitch in the ditch from the top of the pockets.

Singer, the Cameo “S” Design and Design, PATCHWORK and INSPIRA are trademarks of The Singer Company Limited S.a.r.l. or its Affiliates. © 2021 The Singer Company Limited S.a.r.l. or its Affiliates. All rights reserved.

# Project Steps - Attaching the Pockets

1. Pin the pockets to the quilted lining/outer piece as shown below.
2. Stitch the pockets in place on 3 sides. Be sure to leave the ends with the binding open.

Singer, the Cameo “S” Design and Design, PATCHWORK and INSPIRA are trademarks of The Singer Company Limited S.a.r.l. or its Affiliates. © 2021 The Singer Company Limited S.a.r.l. or its Affiliates. All rights reserved.

3. Use a plate as a template to round the edges of your double oven mitt. Mark and cut the curved corners.

4. Once the corners are cut stitch around them to hold the layers together.

# Project Steps - Attaching the Binding

1. Stitch the binding on using a ¼" seam allowance. Since the binding was cut on the bias it will fit around the curved ends. When stitching the binding on, sew slowly and do not stretch the binding. Ease around the curved ends adjusting as needed. Sew around the entire project and join the ends. Note: Make sure the side of the binding with the INSPIRA™ ¼" Stick N' Fuse II Tape is facing up as shown.

Singer, the Cameo "S" Design and Design, PATCHWORK and INSPIRA are trademarks of The Singer Company Limited S.a.r.l. or its Affiliates. © 2021 The Singer Company Limited S.a.r.l. or its Affiliates. All rights reserved.

2. Fold the binding to the back side of the double oven mitt. Remove the paper backing from the INSPIRA™ ¼" Stick N' Fuse II Tape and fuse in place.

3. Change the presser foot to the Satin Stitch Foot for better visibility when stitching. Stitch down the binding in the ditch on the top side of your project.

Congratulations you have finished your Quilted Double Oven Mitt!

Singer, the Cameo "S" Design and Design, PATCHWORK and INSPIRA are trademarks of The Singer Company Limited S.a.r.l. or its Affiliates. © 2021 The Singer Company Limited S.a.r.l. or its Affiliates. All rights reserved.